

Phase out of DGPI and DGPIIL



SPC11系统中替换气缸DGPI/L


更换缸的同时，必须更换相应的传感器信号模块AIF，如下

Existing with DGPI/L	
Type	Part-no.
SPC11-MTS-AIF	192218

New with DDLI/DGCI	
Type	Part-no.
SPC11-MTS-AIF-2	548128

DGPI-D2		peplaced by	DDLI
Ø	Part-No.		Part-No.
25	175134		1315779
32	175135		1344778
40	175136		1463452
50	175137		-
63	175138		1572299

DGPIL-D2		peplaced by	DGCI
Ø	Part-No.		Part-No.
25	175134		544426
32	175135		544427
40	175136		544428
50	175137		-
63	175138		544429

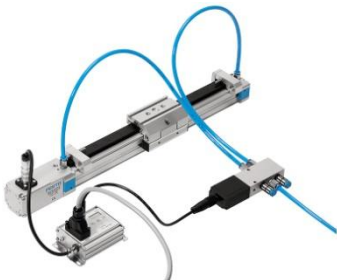

注：如果需要更换控制器，需要把SPC11换成CMPX

SPC200系统中替换气缸DGPI/L


更换缸的同时，必须更换相应的传感器信号模块AIF，如下

Existing with DGPI/L	
Type	Part-no.
SPC-AIF-MTS	170231

New with DDLI/DGCI	
Type	Part-no.
SPC-AIF-MTS-2	548128



DGPI-D2		peplaced by	DDLI
Ø	Part-No.		Part-No.
25	175134		1315779
32	175135		1344778
40	175136		1463452
50	175137		-
63	175138		1572299

DGPIL-D2		peplaced by	DGCI
Ø	Part-No.		Part-No.
25	175134		544426
32	175135		544427
40	175136		544428
50	175137		-
63	175138		544429

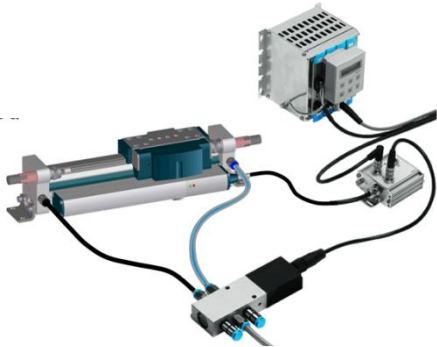

注：如果需要更换控制器，需要把SPC200换成CMAX


DGPI dimensions

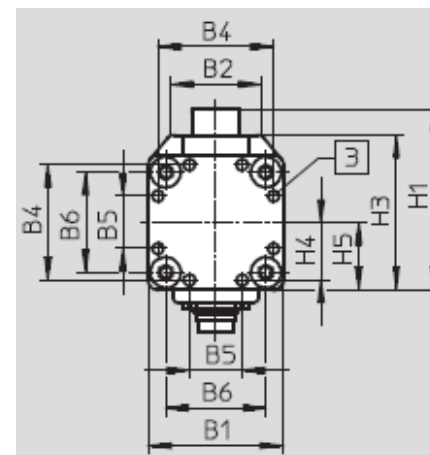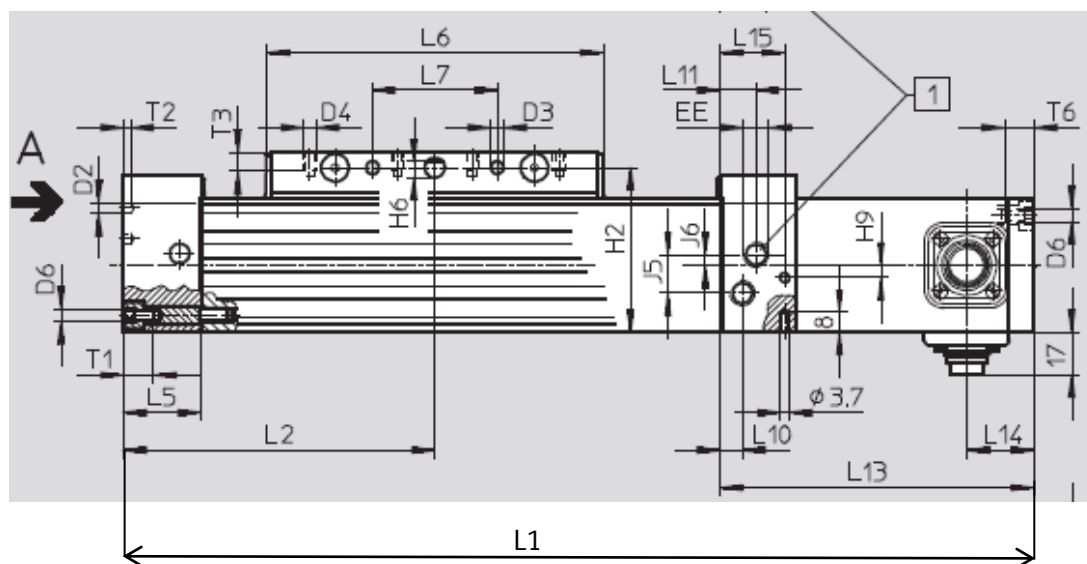

	Ø 25	Ø 32	Ø 40	Ø 63
Length L 1 + stroke	301+	345+	397+	513+
Width B1	54	54	64	106


All dimensions in mm

DDLI dimensions

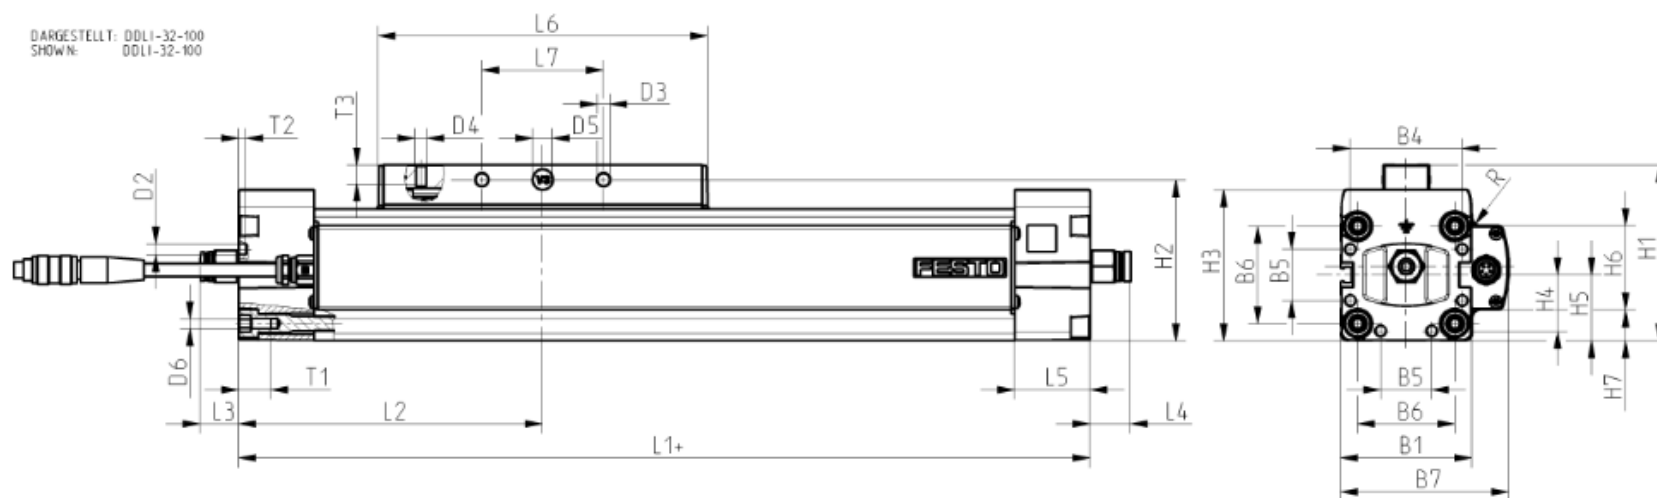

	Ø 25	Ø 32	Ø 40	Ø 63
Length L 1+ stroke	200	250	300	400
Width B7	60,2	69,1	78,4	110,9

All dimensions in mm

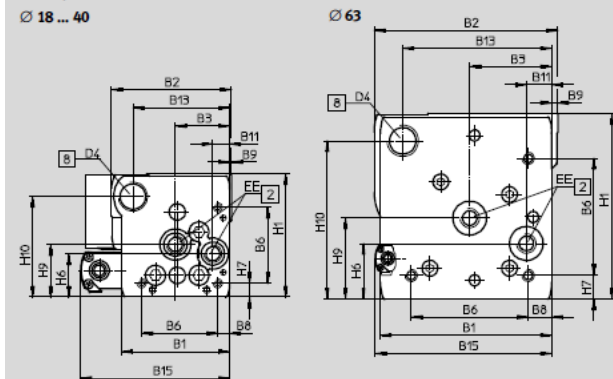

Ø [mm]	L1			L2			L3	L4	L5	L6	L7		
	KF	KF-GP	1H-PN	KF	KF-GP	1H-PN					KF	KF-GP	KF-YSR(W)
18	150	157	—	74,5	78	—	5,7	5,8	15	5,5	14,5 ... 16,5	18 ... 20	14,5 ... 34,5
25	200	205	271	100	102,5	100	10,5	10,6	24,5	10,6	22,5 ... 26,5	25 ... 29	22,5 ... 47,5
32	250	250	320,5	124,8	124,8	124,8	14,5	14,5	30,5	14,5	27,3 ... 32,3	27,3 ... 32,3	27,3 ... 52,3
40	300	312	458	150	156	150	14,6	14,6	33,5	14,6	31 ... 36	37 ... 42	31 ... 56
63	400	—	—	200	—	—	20	20	44	20	41 ... 46	—	41 ... 76