

将 MFH-3 改成 MOFH-3 (VL/VL0)，步骤如下：

- 1、拧松先导头两个螺丝，拆下先导头，将内部密封垫旋转 180 度，密封垫上有标号，此时将标号 2 朝外放置。
- 2、改变气口连接方式，气口 11 进气，气口 33 排气。

#### Variants

VL/0-3-...

Depending upon selected connections:  
Normally closed or normally open

MFH-3-..., MOFH-3-...

- MFH-3-...  
Normally closed
- MOFH-3-...  
Normally open

These valves can be converted from one function to the other by rotating the seal under the cover.

MFH-3-...-S

This valve type can be used within a range of 0 to 8 bar and also as MOFH (through flow when not actuated) with a separate pilot line.


#### MFH-5-...-S

The external pilot air connection means that these valves can also be used with low operating pressures.



密封垫选转180度



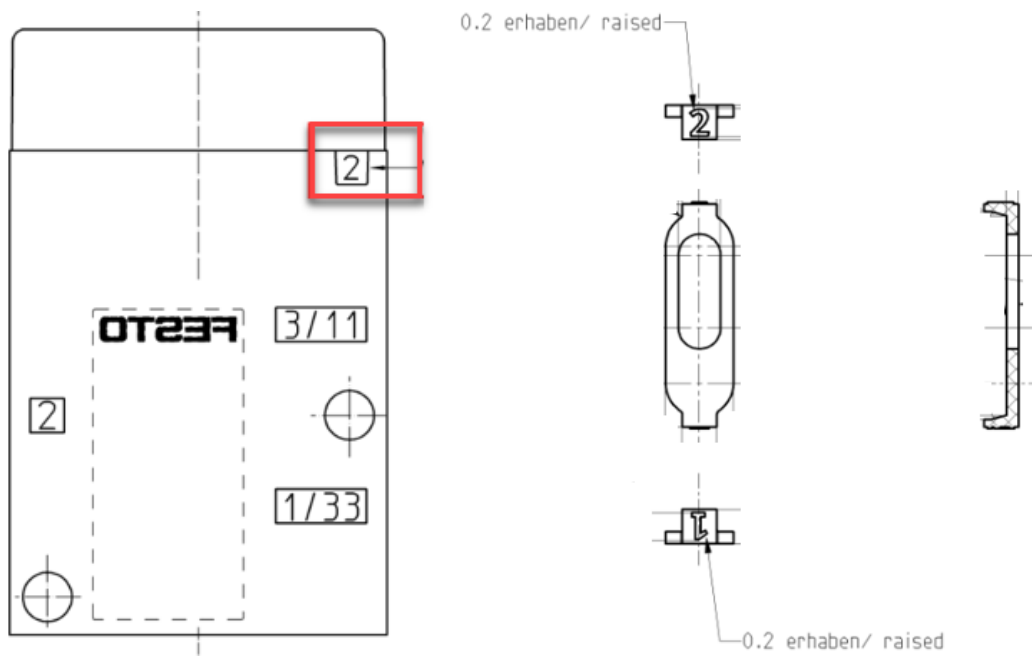

阀体上密封垫显示“1”，则表示 **MFH/VL**  
 阀体上密封垫显示“2”，则表示 **MOFH/VLO**